

XR2000 SPOT



03.MS009.EB.L

User's Manual Rel 1.3 **GB**

D.T.S. Illuminazione srl - ITALY
<http://www.dts-lighting.it>



The Lighting Company

Made in Italy

Le informazioni contenute in questo documento sono state attentamente redatte e controllate. Tuttavia non è assunta alcuna responsabilità per eventuali inesattezze. Tutti i diritti sono riservati e questo documento non può essere copiato, fotocopiato, riprodotto per intero o in parte senza previo consenso scritto della D.T.S .

D.T.S si riserva il diritto di apportare senza preavviso cambiamenti e modifiche estetiche , funzionali o di design a ciascun proprio prodotto. D.T.S non assume alcuna responsabilità sull'uso o sull'applicazione dei prodotti o dei circuiti descritti.

The information contained in this publication has been carefully prepared and checked. However, no responsibility will be taken for any errors. All rights are reserved and this document cannot be copied, photocopied or reproduced, in part or completely, without prior written consent from D.T.S. D.T.S. reserves the right to make any aesthetic, functional or design modifications to any of its products without prior notice. D.T.S. assumes no responsibility for the use or application of the products or circuits described herein.

Les informations contenues dans le présent manuel ont été rédigées et contrôlées avec le plus grand soin. Nous déclinons toutefois toute responsabilité en cas d'éventuelles inexactitudes. Tous droits réservés. Ce document ne peut être copié, photocopié ou reproduit, dans sa totalité ou partiellement, sans le consentement préalable de D.T.S.

D.T.S. se réserve le droit d'apporter toutes modifications et améliorations esthétiques, fonctionnelles ou de design, sans préavis, à chacun de ses produits. D.T.S. décline toute responsabilité sur l'utilisation ou sur l'application des produits ou des circuits décrits.

Las informaciones contenidas en este documento han sido cuidadosamente redactadas y controladas. Con todo, no se asume ninguna responsabilidad por eventuales inexactitudes. Todos los derechos han sido reservados y este documento no puede ser copiado, fotocopiado o reproducido, total o parcialmente, sin previa autorización escrita de D.T.S.

D.T.S. se reserva el derecho a aportar sin previo aviso cambios y modificaciones de carácter estético, funcional o de diseño a cada producto suyo. D.T.S. no se asume responsabilidad de ningún tipo sobre la utilización o sobre la aplicación de los productos o de los circuitos descritos.

INDEX:

1- SYMBOLS	4
2- GENERAL WARNING	4
3- GENERAL WARRANTY CONDITION	4
4- TECHNICAL FEATURES	5
5- ACCESSORIES	7
6- IMPORTANT SAFETY INFORMATION	8
6.1 Fire prevention	
6.2 Prevention of electric shock	
6.3 Protection against ultraviolet radiation	
6.4 Safety	
6.5 Level of protection against the penetration of solid and liquid objects	
7- MOUNTING THE LAMP	9
7.1 Lamp alignment	
8- VOLTAGE AND FREQUENCY	10
9- INSTALLATION	10
9.1 Safety cable	
9.2 Protection against liquids	
9.3 Movement	
9.4 Risk of fire	
9.5 Forced ventilation	
9.6 Ambient temperature	
10- MAINS CONNECTION	11
10.1 Protection	
11- DMX SIGNAL CONNECTION	12
11.1 DMX Addresses	
11.2 Selecting the DMX address	
12- FIRMWARE UPDATING	13
13- DISPLAY FUNCTIONS	14
14- ERROR MESSAGES	17
15- HIDDEN MENU	18
15.1 Calibration mode	19
16- PAN & TILT SPEED	20
17- FANS SPEED	
18- OPENING THE PROJECTOR HOUSING	21
19- REPLACING GOBOS	
20- PERIODIC CLEANING	22
20.1 Lenses and reflectors	
20.2 Fans and air passages	
21- PERIODIC CONTROLS	
22- DMX PROTOCOL	23
23- 8 MOTORS CONTROL CARD	38
24- 8 MOTORS SLAVE CONTROL CARD	39
25- PAN & TILT CARD	40
26- CABLES RESEND CARD	
27- DISPLAY CARD	
28- LAMP ON-OFF CONTROL CARD	
29- ROTATING GOBO WHEEL	41
30- FIXED GOBO WHEEL	42
31- COLOUR WHEEL 1	43
32- COLOUR WHEEL 2	44

1- SYMBOLS

Graphic symbols used on this manual



THIS SYMBOL INDICATES A HOT SURFACE




THIS SYMBOL INDICATES ELECTRIC SHOCK RISK



THIS SYMBOL INDICATES GENERAL RISK



THIS SYMBOL MEANS "DO NOT PLACE THE UNIT ON INFLAMMABLE SURFACES"

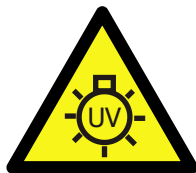

THIS SYMBOL MEANS "RADIATION FROM THIS LAMP CAN CAUSE DAMAGE TO EYES AND SKIN"



THIS SYMBOL INDICATES THE MINIMUM DISTANCE TO BE KEPT BETWEEN THE DEVICE AND THE LIT OBJECT

2- GENERAL WARNING

Read the instruction contained in this user manual carefully, as they give important information regarding safety during installation , use and maintenance.

The device is not for domestic use and must be installed by a qualified electrician or experienced person.

Always disconnect the device from the mains before replacing the lamp.

The lamp must be replaced if it has been damaged or deformed by prolonged use or overheating.

The device must always be equipped with an efficient ground connection.

3- GENERAL WARRANTY CONDITIONS

The unit is guaranteed for 24 months from the date of purchase against manufacturing material defects.

4- TECHNICAL FEATURES

The XR2000 SPOT is a brand new moving head fitted with a 700W discharge lamp, which delivers a massive 27.000 Lux at 5 m (10°).

The XR2000 SPOT is fitted with a Philips MSR Gold 700/2 Fastfit lamp (50.000 Lumens) combined with a dichroic parabolic reflector.

The XR2000 SPOT is one of the most complete moving heads in the 700W range and is particularly suitable for all professional applications, both mobile (concerts, shows, tours, special events) and fixed (clubs and other venues), requiring a light with extremely high luminous output and versatility of functions.

The XR2000 SPOT in fact features a very flexible colour generation, thanks to two colour wheels with 7 colours each, with linear selection for perfect 2-colour beams, and also 2 colour conversion filters (3200°K and 5600°K).

The XR2000 SPOT incorporates also motorized focussing, motorized iris, motorized linear zoom (8°- 30°), 3-facet rotating prism, 1 wash effect filter.

2 gobo wheels are available, featuring respectively: 7 rotating and 16 bit indexable gobos (interchangeable); 8 fixed gobos (interchangeable).

The XR2000 SPOT also includes a new Pan / Tilt locking system with recessed buttons and electronic ballast.

The XR2000 SPOT is the ideal moving head as well for all applications in which noiseless operation is required, thanks to its silent internal ventilation system and silent pan/tilt operation.

XR2000 SPOT (Cod. 03.MS009.EB.L)

- Electronic ballast 90-260V 50/60 Hz • Black colour

Also available in white (RAL 9003) colour on demand.

Lamp

Lamp: Philips MSR Gold 700/2 Fastfit

Automatic switching ON of lamp in case of accidental switching OFF.

Lamp ON/OFF via DMX; Reset via DMX.

Optical group

64.300 Lux at 5 m (8° beam angle)

Dichroic glass reflector

Focus

Motorized focus

Iris

Motorized iris (16 bit)

Zoom

Motorized zoom (8°- 30°)

4- TECHNICAL FEATURES

Dimmer / shutter / strobo

Linear dimmer

Shutter

Strobe from 0,85 flash/sec to 6,75 flash/sec

Power saving mode (the lamp dims to 50% six seconds after shutter closure)

Colours

2 Colour wheels (7 colours + open with linear selection)

3200°K and 5600°K colour conversion filters

Colour change with blackout sync; rainbow effect

Gobos

2 gobo wheels: 1 rotating (7 indexable 16 bit gobos + open) and 1 fixed (8 gobos + open)

Extractable gobo holders for both wheels

Gobo change with synchronized blackout

Gobo scrolling; Gobo shake

Effects

Indexable prism rotating in both directions (3-facet)

Wash effect filter

Pan / Tilt

Pan 540° (3,9 sec.)

Tilt 270° (2,6 sec.)

16-bit resolution

2-Speed function (2 selectable pan/tilt speeds); extremely smooth and precise movements even at the highest speeds

Pan / Tilt locking system with recessed buttons

Automatic Pan/Tilt repositioning in case of knocks

25 DMX channels (Default)

Internal operating system updatable via DMX

Connections

4 XLR connectors (3-pole In and Out; 5-pole In and Out) by Neutrik

POWERCONN connector by Neutrik

Power supply

Electronic ballast: 90 - 260 V (50/60 Hz)

Power consumption: 820 W

Standard accessories

2 x "C" GQuick clamps with "fastlock" connection

Thermal

Operating ambient temperature: -10° / 40°

Weight

43 Kg (electronic ballast)

4- TECHNICAL FEATURES

Dimensions

Packaging Dimensions (LxWxH)


670 x 550 x 730 mm

Weight: 48 Kg

Unit Dimensions (LxWxH)

555x510x825mm

Weight: 43 Kg

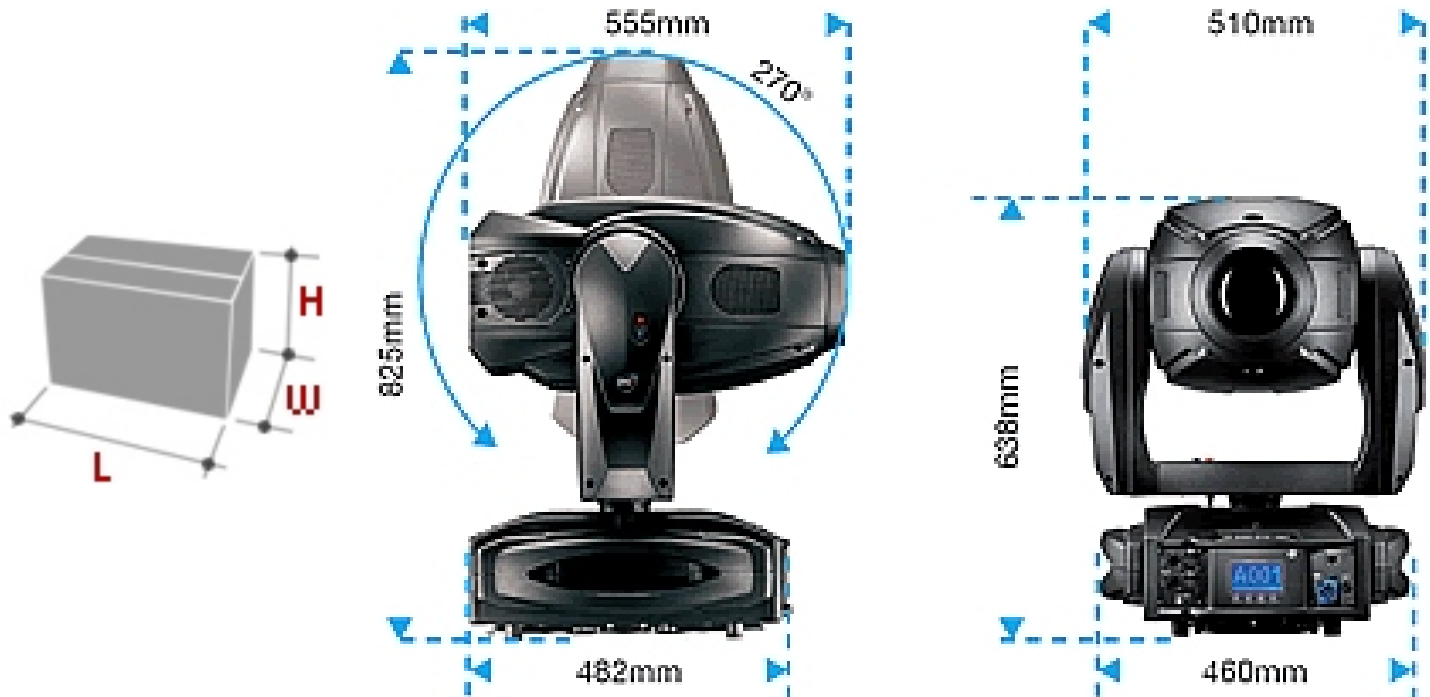

5- ACCESSORIES

As standard

- 1 x MSR Gold 700/2 Fastfit lamp
- 1 x POWERCONN male cable connector (cod. 0520P014)
- 1 x XLR 5 Pins male cable connector (cod. 0508B028)
- 1 x XLR 5 Pins female cable connector (cod. 0508B027)
- 2 x "C" Clamp GQUICK with "Fast Lock" connection 1/4 turn (max. load. 80Kg) (cod. 0521A014)
- User's manual

Optional (on request)

- Wireless DMX receiver card (cod. 03.LA.012)
- "C" Clamp G60 black (max. load 50Kg) (cod. 0521A004)
- "C" Clamp G60 chrome (max. load. 50Kg) (cod. 0521A004.20)
- "C" Clamp GQUICK with "Fast Lock" connection 1/4 turn (max. load. 80Kg) (cod. 0521A014)
- "C" Clamp G100 black / professional (max. load. 200Kg) (cod. 0521A015)
- Omega clamp with "Fast Lock" connection 1/4 turn (cod. 02K00467)
- Safety wire (3mm x 60 cm), ring spring catch, max. capacity load 60Kg (cod. 0521A010)

6- IMPORTANT SAFETY INFORMATION

6.1 Fire prevention:

XR2000 SPOT uses a PHILIPS MSR Gold 700/2 Fastfit lamp

The use of any other alternative lamp is not recommended and will null and void the fixture's warranty.

-Never locate the fixture on any flammable surface.

-Minimum distance from flammable materials: 1.5 MT.

-Minimum distance from the closest illuminable surface: 2 MT. 12M

-Replace any blown or damaged fuses only with those of identical value. Refer to the wiring diagram if there is any doubt.

-Connect the projector to mains power via a thermal magnetic circuit breaker.

6.2 Prevention of electric shock:



-High voltage is present inside the unit. Unplug the unit prior to performing any function which involves touching the inside of the moving head, including lamp replacement.

-The level of technology inherent in the XR2000 SPOT requires the assistance of specialised personnel for all servicing. Please refer to an authorised DTS service centre.

-A good earth connection is essential for proper functioning of the projector.

-Never connect the unit without proper earth connection.

-The fixture should be located in places with a good air ventilation.

6.3 Protection against ultraviolet radiation:



-Never turn on the lamp if any of the lenses, filters or ABS covering are damaged. Their respective shielding functions will only operate efficiently if they are in perfect working order.

-Never look directly the lamp when it is on.

6.4 Safety:



-The projector should always be installed with bolts, clamps and other tools that are capable of supporting the weight of the unit.

-Always use a second safety cable to sustain the weight of the unit in case of the failure of the main fixing point.

-The external surface of the unit, at various points, may exceed 70°C. Never handle the unit until at least 10 minutes have elapsed since the lamp was turned off.

-Always replace the lamp if any physical damage is evident.

-Never install the fixture in an enclosed area lacking sufficient air flow. The ambient temperature should not exceed 40°C.

-A hot lamp may explode, so always wait for at least 10 minutes prior to attempting to replace the lamp.

-Always wear suitable hand protection when handling the lamp.

6.5 Level of protection against the penetration of solid and liquid objects:



-The projector is classified as an ordinary appliance and its protection level against the penetration of solid and liquid objects is IP 20.

For outdoor use, D.T.S. recommend the use of the dedicated raincovers:

- Raincover for XR2000 base (top) (cod. 03.MA009)
- Raincover for XR2000 base (bottom) (cod. 03.MA010)

7- MOUNTING THE LAMPS

Warning: Switch off the unit before replacing the lamp.



Philips MSR Gold 700/2 Fastfit
Power 700W
Luminous flux 50,000 lm
Colour temperature 7.500°K
Lampbase PGJX50
Rated life 750 hours

1) Using a screwdriver, loose the 3 screws A, B, C, (photo 1) and remove the metal cover .

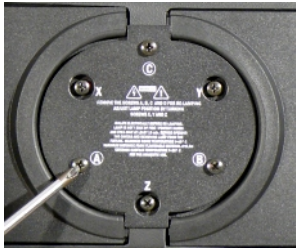


Photo 1

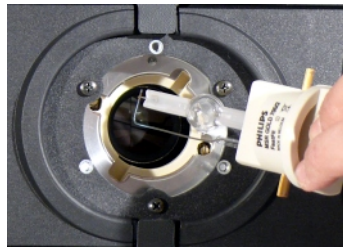


Photo 2

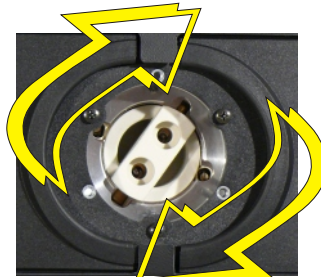


Photo 3

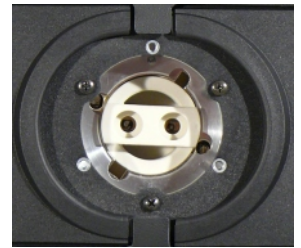


Photo 4

2) Insert the lamp (photo2).

3) Rotate the lamp 1/4 turn clockwise (photo 3 and 4).

The lamp used on XR2000 SPOT is made in quartz glass and should be handled with care. Always follow the instructions supplied in the lamp's packaging. Never touch the glass directly but use the tissue provided in the lamp's packaging. The PGJX50 lamp socket is not symmetrical.

DO NOT USE UNDUE FORCE ON THE GLASS. In case of difficulty, read again the instructions and repeat the procedure.

4) Replace the metal cover and tighten the screws A,B,C, which were previously removed.

WARNING: Never look directly at the lamp when it's lit.

Discharge lamps emits UV rays; radiation from this lamp can cause damage to eyes and skin.



7.1 Lamp alignment

Attention: we recommend to align the lamp in the optical system to avoid overheating of the dichroic filters and other components inside the unit. The lamp alignment is also essential to obtain the maximum uniformity and luminous performance by the projection.


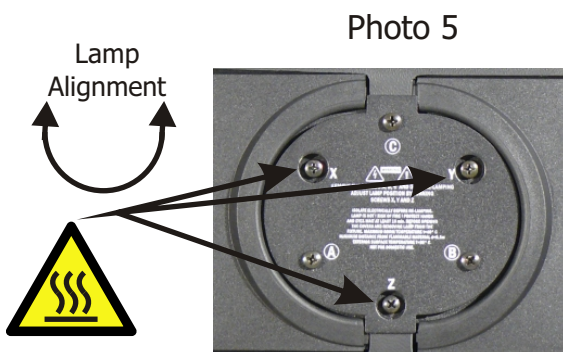


Photo 5

Normal

Hot Spot

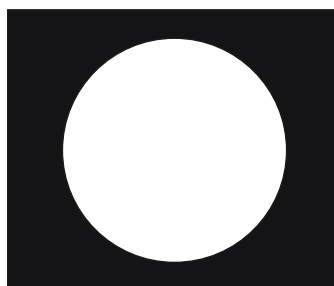

1) Mount the fixture in an orientation so that it may be squarely projected onto a smooth white surface no less than 3 meters away. 2) Using a console or the menu system, focus an open (white) beam onto the surface and observe the beam. 3) Using a phillips-head screw driver, rotate the 3 adjusters X, Y and Z (photo 5) until you achieve a uniform flat field.

When the lamp is correctly optimized, you will have an evenly projected light beam, with no shadows or zones wich are brighter than others.

8- VOLTAGE AND FREQUENCY

The XR2000 SPOT with electronic ballast can operate at 90-260 VOLT 50 or 60 Hz.

9- INSTALLATION


XR2000 SPOT may be either floor or ceiling mounted.

For floor mounting installations, the XR2000 SPOT is supplied with four rubber mounting feet on the base.

For ceiling mounted installations, we recommend the use of appropriate clamps to fix the unit to the mounting surface.

The supporting structure from which the unit is hung should be capable of bearing the weight of the unit, as should any clamps used to hang it. The structure should also be sufficiently rigid so as not to move or shake whilst the XR2000 SPOT is moving.


Eight 1/4 turn Fast Locks connections placed in the base of the unit allow to fix the XR2000 SPOT in any position, by using the two Fast Lock "C" clamps provided in the box.

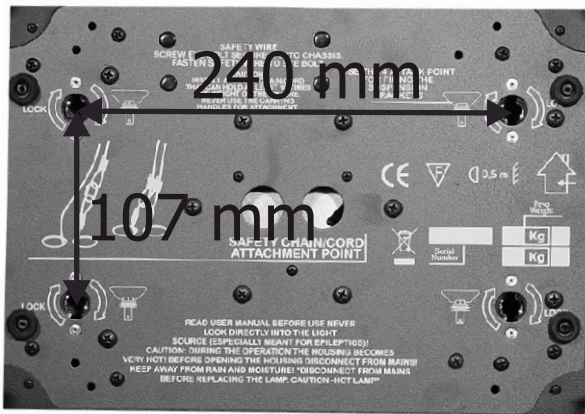

9.1- Safety cable

We recommend the use of a safety cable connected to the XR2000 SPOT and to the suspension truss in order to avoid the fixture accidentally falling should the main fixing point fail. Make sure that the iron cable can bear the weight of the entire unit.

You may attach the safety cable to the two holes (A) located on the base of the fixture, as shown in the picture below.

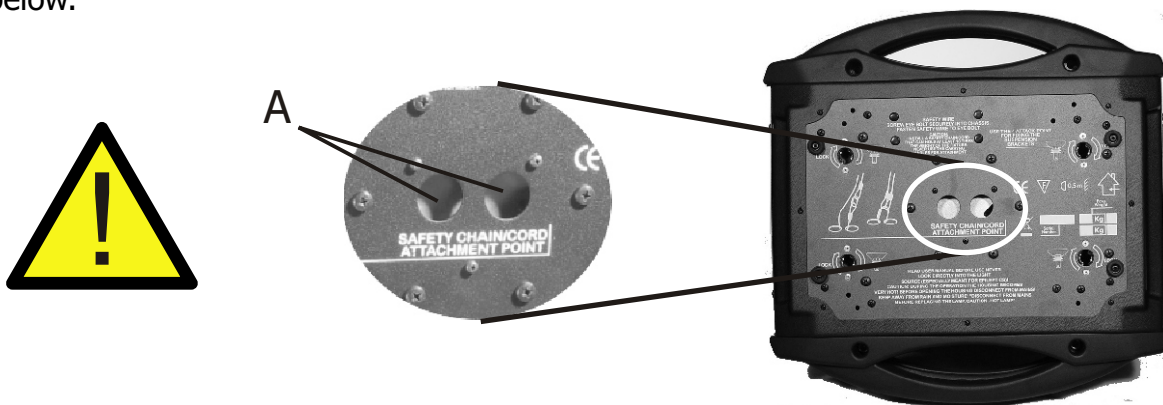

9.2- Protection against liquids

The projector contains electric and electronic components which should under no circumstances come into contact with oil, water or any other liquid. The proper unit functioning would be compromised should this occur.

9.3- Movement

The projector has a maximum movement of 540° for Pan and 270° for Tilt. DO NOT place any obstructions in the path of the projector's movement.



WARNING

Do not place any object in the path of the projector's movement



9.4- Risk of fire

Each fixture produces heat and must be installed in a well-ventilated place. The minimum recommended distance from flammable material is 1 MT.



Minimum distance from the object being illuminated is 2 MT. 12M

9.5- Forced ventilation

You will note, on inspection, that the unit features various air inlets and cooling fans located on both the base and head of the fixture. These should, under no circumstances, be blocked or obstructed whilst the projector is in operation.

Doing so could cause the fixture to seriously overheat thereby compromising its proper operation.

9.6- Ambient temperature

The projector should never be installed in places that lack a constant air flow. The ambient temperature should NOT exceed 40°C.

10- MAINS CONNECTION

XR2000 SPOT with electronic ballast operate at 90-260 VOLT 50-60 Hz.

Prior to connecting the unit to your mains supply, ensure that the model in your possession correctly matches the mains supply available. For connection purposes, ensure that your plug is capable of supporting 8 amps at 230V, Or 16 amps at 100-120 V

Strict adherence to regulatory norms is strongly recommended.



Electronic ballast
90-260V 50 / 60Hz

10.1- Protection

The use of a thermal magnetic circuit breaker is recommended for each XR2000 SPOT.

A good earth connection is essential for the correct operation of the projector.



11- DMX SIGNAL CONNECTION

The unit operates using the digital DMX 512 (1990) signal. Connection between the mixer and the projector or between projectors must be carried out using a two pair screened \varnothing 0.5 mm cable and a XLR 5 or 3 pins connector. Ensure that the conductors do not touch each other. Do not connect the cable ground to the XLR chassis

The plug housing must be isolated. Connect the mixer signal to the DMX IN projector plug and connect it to the next projector by connecting the DMX OUT plug on the first projector to the DMX IN plug of the second one.

This way, all the projectors are cascade connected.

NB. If the display showing the DMX address flashes, then one of the following errors has occurred:


- DMX signal not present
- DMX address not valid
- DMX reception problem




For Installations where long distance DMX cable connections are needed, we suggest to use a DMX terminator.

The DMX terminator is a male XLR 3-5 pins connector with a 120 ohm resistor Between pin 2 and 3.

The DMX terminator must be plugged into the last unit (DMX out panel connector) of the DMX line.

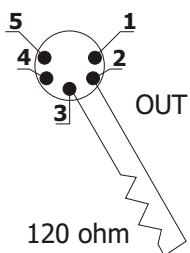

PLACE A 120 OHM RESISTOR BETWEEN PIN 2 AND 3 OF A MALE XRL CONNECTOR AND PLUG IT INTO THE DMX OUT PANEL CONNECTOR OF THE LAST UNIT CONNECTED TO THE DMX LINE

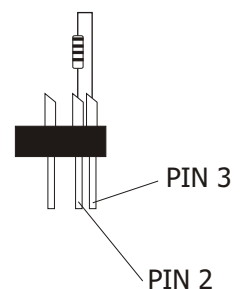

11.1-DMX Addresses

XR2000 SPOT can be controlled with 25 (default) or 18 OR 26 DMX channels.

If you want to use the unit in 25 channels mode (default), set the following addresses on the mixer:

Projector 1 A001

Projector 2 A026 If you want to select the next projector, just add "25"

Projector 3 A051

..... A....

projector 6 A126

11.2-Selecting the DMX address

1) Press the UP-DOWN key until you reach the required DMX channel. The numbers on the display will start to flash (but the new DMX address hasn't yet been set).

2) Press ENTER to confirm your selection. The numbers on the display will stop flashing and the projector is now setted to the new DMX address.

TRICKS:

if you keep pushed the UP or DOWN keys, the channels are calculated more quickly and you get a faster selection.

12 FIRMWARE UPDATING

Warning:

This procedure require a base knowlege of computer applications and Windows Hyperterminal program. **Please refer to an authorised DTS service centre.**



To update the software version of the XR2000 SPOT you need:

D.T.S. RED BOX interface (D.T.S. Code: 03.LA.008).

USB-DMX Driver for the D.T.S. RED BOX interface .

(The driver and the installation procedure are available in our web site www.dts-lighting.it)


Updating the software version.

Please follow the procedure below to perform the update:

1. Install the D.T.S. RED BOX USB-DMX driver on the PC you will use to update the unit software.
2. Connect the D.T.S. RED BOX interface to the PC by using a USB cable.
3. Connect the D.T.S. RED BOX interface to the fixture by using a DMX cable.
4. Download the new software version into the unit by using Windows Hyperterminal program.

It will be possible to download the software from the reserved area of D.T.S. web site:
www.dts-lighting.it.

13- DISPLAY FUNCTIONS

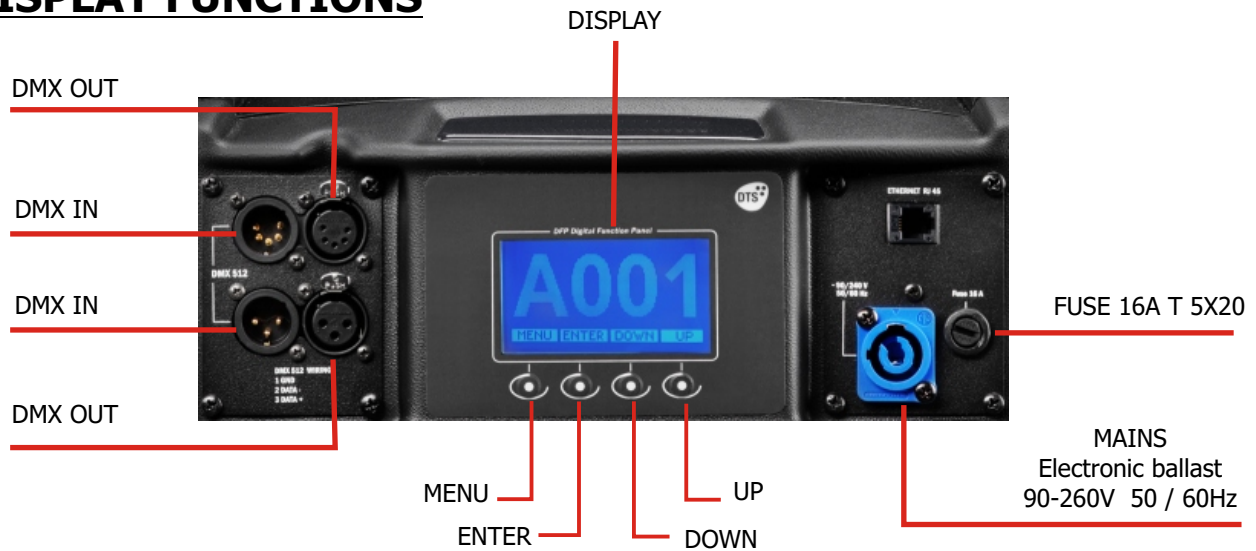

DISPLAY FUNCTIONS

The XR2000 SPOT display panel shows all the available functions . Using these functions, it is possible to change some of the parameters and add some functions. Changing the DTS setting can vary the functions of the unit so that it does not respond to the DMX 512 used to control it. Carefully follow the instructions below before carrying out any variations or selections.

NOTE: the symbol  shows which key has to be pushed to obtain the desired function.

Pan Direction

PAN DIRECTION
This menu allows to set the Pan movement.
Normal or Reversed



Pan movement Normal or Reversed
Default = Normal

Tilt Direction


TILT DIRECTION
This menu allows to set the Pan movement.
Normal or Reversed



Tilt movement Normal or Reversed
Default = Normal

Pan Tilt Speed

PAN TILT SPEED
Pan Tilt Speed control (1-4)

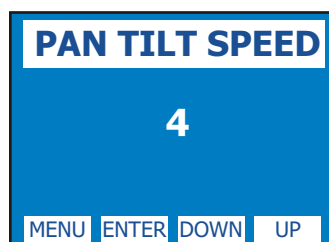

Pan Tilt Speed control
Default = 4

####

13- DISPLAY FUNCTIONS

Display


DISPLAY FLIP / STAND BY / CONTRAST

Display Flip:
Reverses display's reading depending on the mounting position
(On the ground or suspended).

Display Standby:
To turn off the display (after 5 seconds)
Or leave it always on.


Display Contrast:
Display contrast regulation (1-16)

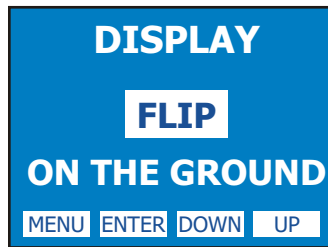


Display Flip
ON THE GROUND (Default)
SUSPENDED



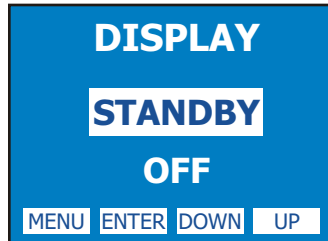

Display Standby
OFF = Display Standby disabled
(Default)
ON = Display goes OFF after 5 seconds



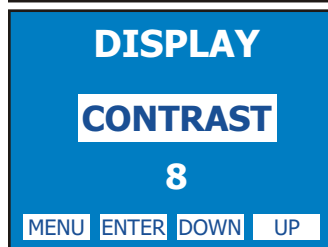

Display Contrast
1-16 (Default = 8)



DMX Mode

DMX MODE
To select DMX mode :
18 channels, 25 or 22 channels



DMX mode
18 channels
25 channels (Default)
26 channels




Lamp

LAMP
Lamp always ON, always OFF,
lamp ON-OFF selectable via DMX
And lamp life time reset


ADJUST
To adjust the lamp with no mixer
connected.
It's possible to set the parameters for
PAN-TILT and ZOOM

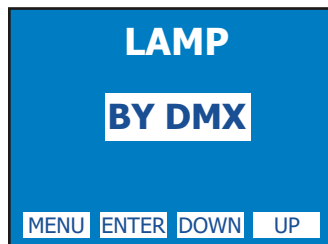

BY DMX = ON / OFF via DMX (default)
ALWAYS ON = Forced ON
ALWAYS OFF = Forced OFF
RESET COUNTER = Lamp life time
reset



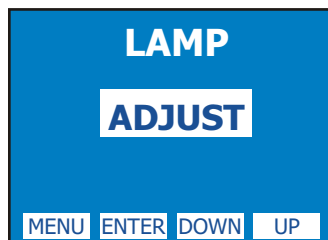


LAMP ADJUST = To adjust the lamp
with no mixer connected.
It's possible to set the parameters for
PAN-TILT and ZOOM



Reset

RESET
Reset via DMX ENABLED / DISABLED
and unit reset

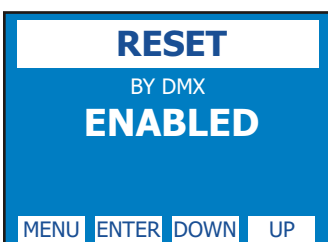

ENABLED = Reset via DMX enabled
(Default)
DISABLED = Reset via DMX disabled
NOW = Unit motors reset



13- DISPLAY FUNCTIONS

Fan Speed

FAN SPEED
Fan Speed control

FAN SPEED

5

MENU
ENTER
DOWN
UP

Fan speed control
1-5 (Default = 5)

 ENTER

Gobo Rotation

GOBO ROTATION
Gobo rotation control the Rotating speed of gobo

GOBO ROTATION

During gobo scrolling

OFF

MENU
ENTER
DOWN
UP

ON
OFF = (Default)

 ENTER

System info

SYSTEM INFO
Lamp life time, lamp strikes, unit life time, 8 motors card software version, Pan&Tilt card software version and unit model

SYSTEM INFO

LAMP LIFE:0000H STRIKE:001
UNIT LIFE: 0010H
8M R.20
PT R.19
MODEL: XR2000 BEAM

MENU
ENTER
DOWN
UP

SYSTEM INFO
Lamp life time, lamp strikes, unit life time, 8 motors card software version, Pan&Tilt card software version and unit model

 ENTER

Reserved

RESERVED
Pan lock-Tilt lock
Pan free-Tilt free
System Reboot
(Code = 100)

RESERVED

ENTER CODE

000

MENU
ENTER
DOWN
UP

PAN LOCK

NO

MENU
ENTER
DOWN
UP

Pan Lock = Lock the Pan to the desired value
Tilt Lock = Lock the Tilt to the desired value
Pan Free = Remove power to Pan motor
Tilt Free = Remove power to Tilt motor
System Reboot = Unit Reboot without needing of turning OFF the unit

 ENTER

Default

DEFAULT
To restore main settings

DEFAULT

RESTORE MAIN SETTINGS

MENU
ENTER
DOWN
UP

DEFAULT

RESTORE MAIN SETTINGS

SURE?


PRESS ENTER TO CONFORM
PRESS MENU TO CANCEL

MENU
ENTER
DOWN
UP


Default
To restore main settings

 ENTER


14- ERROR MESSAGES

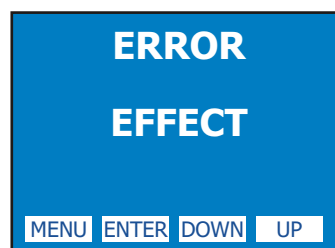


EFFECT WHEEL ERROR

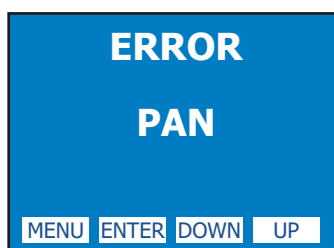


PAN REPOSITIONING
ENCODER ERROR

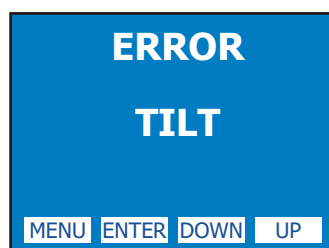


TILT REPOSITIONING
ENCODER ERROR

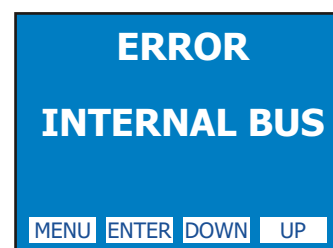


COMMUNICATION
PROBLEM BETWEEN 8
MOTORS CARD AND
PAN&TILT CARD

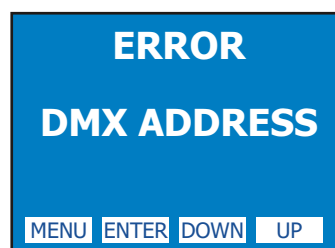


DMX ADDRESS
ERROR

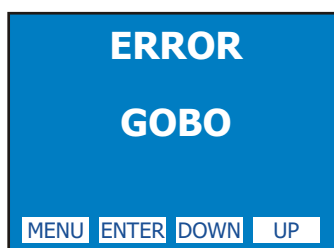


GOBO WHEEL ERROR

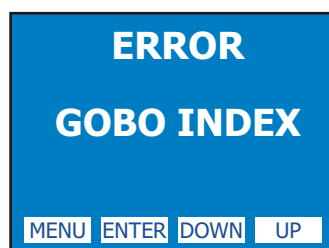


GOBO POSITION
ERROR

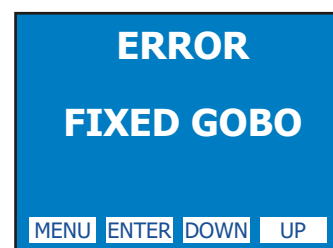


FIXED GOBO WHEEL
ERROR

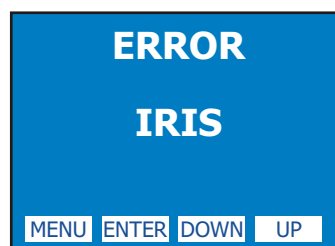


IRIS ERROR

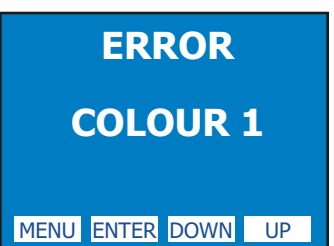


COLOUR WHEEL 1
POSITION ERROR

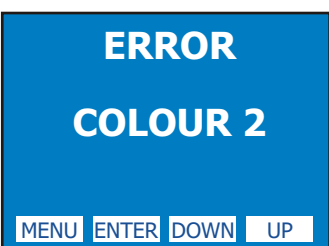

COLOUR WHEEL 2
POSITION ERROR

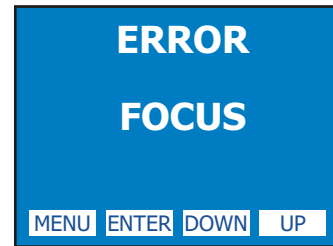

FOCUS ERROR

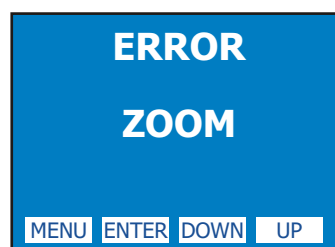

ZOOM ERROR


15- HIDDEN MENU

For technical personnel only.


To operate this menu:

-Connect the projector to the DMX controller (DMX SIGNAL MUST BE CORRECTLY RECEIVED)

- Reset the XR2000 SPOT (reset from the MENU, not from the DMX controller!).
- While reset is running, press the MENU and ENTER keys at the same time.

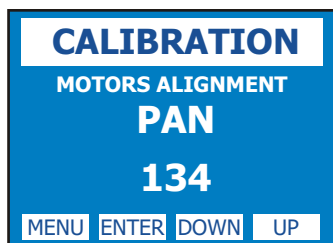


ELECTRONIC
CALIBRATION OF THE
MOTORS

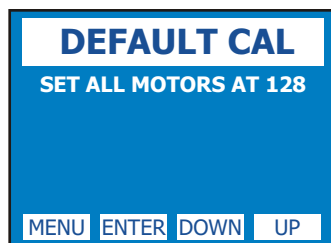

RESET EEPROM.
RESET ALL SETTINGS
TO 128 VALUE



FAN SPEED WHEN
DIMMER CLOSED

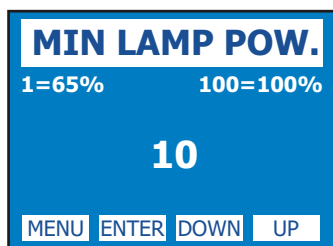


LAMP POWER WHEN
DIMMER CLOSED




EXIT FROM HIDDEN
MENU

15.1 Calibration

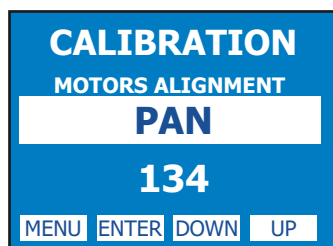

PAN ALIGNMENT
To align Pan position

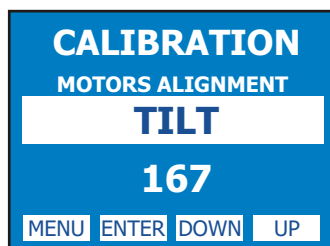

TILT ALIGNMENT
To align Tilt position




SHUTTER ALIGNMENT
To align Shutter blades



COLOUR WHEEL 1
ALIGNMENT



COLOUR WHEEL 2
ALIGNMENT

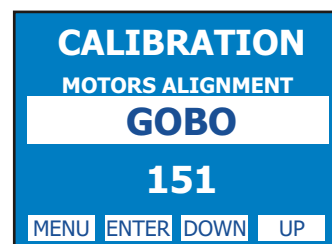


GOBO WHEEL ALIGNMENT
To align Gobo wheel




GOBO WHEEL INDEX ALIGNMENT
To align Gobo wheel Index




GOBO FIXED WHEEL
ALIGNMENT
To align Gobo wheel

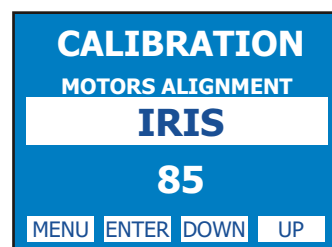


IRIS ALIGNMENT
To align IRIS

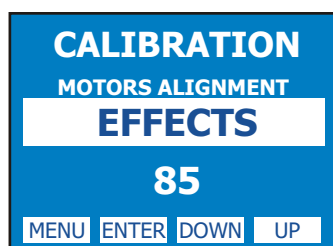


EFFECTS ALIGNMENT
To align EFFECTS

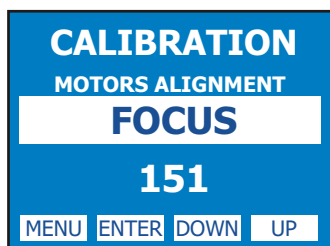

FOCUS ALIGNMENT
To align FOCUS

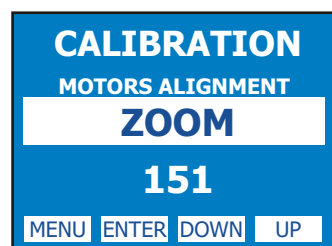

ZOOM ALIGNMENT
To align ZOOM

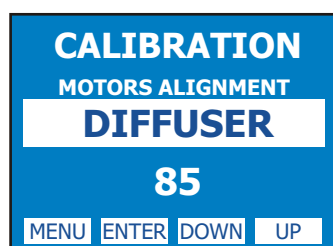

DIFFUSER ALIGNMENT
To align DIFFUSER

Calibration mode

16- PAN & TILT SPEED (default: 4)

You can set the PAN and TILT motors at high speed on your XR2000 SPOT.

Press menu until you see PAN TILT SPEED.

Press ENTER and select a speed with UP-DOWN (there are 4 speeds). Confirm by pressing ENTER.

17- FAN SPEED (default: 5)

Fan speed regulation makes it possible to reduce fan noise. However, the ambient temperature must be less than 35° C.

18- OPENING THE PROJECTOR HOUSING

It is possible to inspect the inside of the projector by removing the cover as indicated below.

ATTENTION

REMOVE MAINS POWER PRIOR TO ACCESSING THE PROJECTOR'S INTERNAL COMPONENTS.

- 1) Loosen the 3 screws which fix the head covers (photo 1) .
- 2) Once unscrewed, simply lift the covers to access the internal components (photo 2).

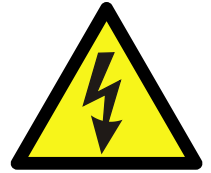


Photo 1



Photo 2

19- REPLACING GOBOS

XR2000 SPOT uses a mechanical system which allows the fixture's gobos to be removed without the use of special tools. Replacement gobos should be made of either heat resistant glass or metal.


An ever-increasing range of gobos is available from your DTS sales network.

Gobo dimensions are as follows:

ø external (ED) = 27.9 mm

ø of image with defined edge (ID) = 24 mm

thickness = from 0.2 to 4 mm (see catalogue)

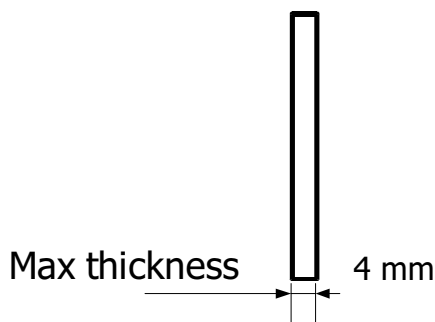

Coated side

When an object is held up the coated side of the glass gobo there is no space between the object and its reflection.



Coated side

Uncoated side

When an object is held up the uncoated side of the glass gobo there is a space between the object and its reflection.



Uncoated side

Load with coated surface toward the light source.

Replacing gobos on the rotating gobo wheel

When replacing gobos, ensure that the projector is switched off.

- 1) Open the projector housing as described on page 21.
- 2) Remove the gobo holder to allow easier access to the gobo (photo 1).
- 3) Release the gobo retaining spring and carefully remove the gobo (photo 2).
- 4) Reverse the procedure to install a replacement gobo.

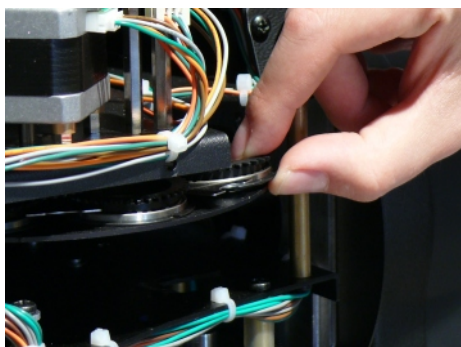


Photo 1

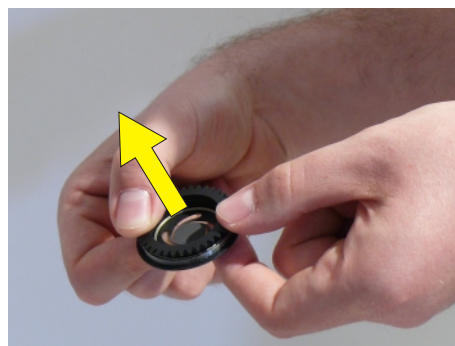


Photo 2

20- PERIODIC CLEANING

20.1- Lenses and reflectors

Even a fine layer of dust can reduce the luminous output substantially. Regularly clean all lenses and the reflector using a soft cotton cloth, dampened with a specialist lens cleaning solution.

20.2- Fans and air passages

The fans and air passages must be cleaned approximately every 6 weeks. This periodic cleaning will depend of course, on the conditions in which the projector is operating. Suitable instruments for performing this type of maintenance are a brush and a common vacuum cleaner or an air compressor. If necessary, clean the fans and air passages more frequently.

21- PERIODIC CONTROLS

Attention

Disconnect mains power prior to removing the projector housing.

Lamp

The lamp should be replaced if there is any visible damage or deformation due to heat. This will help to avoid the danger of the lamp exploding.

XR2000 SPOT lamp lifespan is about 750 hours, then it is necessary to replace it.

Mechanical parts


Periodically check all mechanical parts, gears, guides, belts, etc. for wear and tear, replacing them if necessary. Periodically check the lubrication of all components, particularly the parts subject to high temperatures. If necessary, lubricate with suitable lubricant, available from your D.T.S. distributor. Check the tension of the belts and adjust it if necessary.

Electrical components

Check all electrical components for correct earthing and proper connection of all connectors, refastening if necessary.

Fuse replacement

Locate the fuse, which protects the lamp and electronics, in the base of the XR2000 SPOT. Using a multimeter, test the condition of the fuse, replacing it with one of equivalent type if necessary.

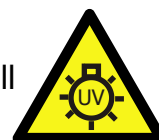

22- DMX PROTOCOL

18 CHANNELS MODE

- 1 PAN msb 540°**
- 2 PAN lsb**
- 3 TILT msb 270°**
- 4 TILT lsb**
- 5 SPEED MOVEMENT**
- 6 DIMMER**
- 7 SHUTTER**
- 8 COLOUR 1**
- 9 COLOUR 2**
- 10 ROTATING GOBO WHEEL**
- 11 GOBO ROTATION / INDEX**
- 12 FIXED GOBO WHEEL**
- 13 IRIS**
- 14 EFFECTS**
- 15 EFFECTS ROTATION**
- 16 FOCUS**
- 17 ZOOM**
- 18 LAMP ON-OFF / RESET**

DMX CHANNEL	1	Parameter: PAN msb
-------------	----------	---------------------------

DMX CHANNEL	2	Parameter: PAN lsb
-------------	----------	---------------------------

DMX CHANNEL	3	Parameter: TILT msb
-------------	----------	----------------------------

DMX CHANNEL	4	Parameter: TILT lsb
-------------	----------	----------------------------

DMX CHANNEL	5	Parameter: SPEED MOVEMENT
-------------	----------	----------------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-10					Standard
11-25					Fast movement
26-127					Vector mode from fast to slow
128-247					Variable time reaction to DMX signal (fast to slow)
248-255					Silent Mode

DMX CHANNEL	6	Parameter: DIMMER
-------------	----------	--------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-7					Black-out
8-255					Proportional dimmer

DMX CHANNEL	7	Parameter: SHUTTER
-------------	---	---------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-19					Black-out
20-39					Open
40-59					Black-out
60-79					Random Strobe
80-89					Strobe speed 1 min. (0,85 Hz)
90-99					Strobe speed 2 (1,4 Hz)
100-109					Strobe speed 3 (2 Hz)
110-119					Strobe speed 4 (3,75 Hz)
120-129					Strobe speed 5 (5 Hz)
130-139					Strobe speed 6 max. (6,75 Hz)
140-149					Pulse open speed 1 min.
150-159					Pulse open speed 2
160-169					Pulse open speed 3
170-179					Pulse open speed 4 max.
180-189					Pulse closed speed 1 min.
190-199					Pulse closed speed 2
200-209					Pulse closed speed 3
210-219					Pulse closed speed 4 max.
220-227					Colour and Gobo in black-out
228-233					Pan and Tilt in black-out
234-255					Open

DMX CHANNEL	8	Parameter: COLOUR 1
-------------	---	----------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-11					Colour1
12-23					Bicolour ½
24-35					Colour2
36-47					Bicolour 2/3
48-59					Colour3
60-71					Bicolour 3/4
72-83					Colour4
84-95					Bicolour 4/5
96-107					Colour5
108-119					Bicolour 5/6
120-131					Colour6
132-143					Bicolour 6/7
144-155					Colour7
156-167					Bicolour 7/8
168-179					Colour8

180-197					Bicolour 8/1
198-200					Right rotation speed 9 max.
201-203					Right rotation speed 8
204-206					Right rotation speed 7
207-209					Right rotation speed 6
210-212					Right rotation speed 5
213-215					Right rotation speed 4
216-218					Right rotation speed 3
219-221					Right rotation speed 2
222-224					Right rotation speed 1 min.
225-228					Stop
229-231					Left rotation speed 1 min.
232-234					Left rotation speed 2
235-237					Left rotation speed 3
238-240					Left rotation speed 4
241-243					Left rotation speed 5
244-246					Left rotation speed 6
247-249					Left rotation speed 7
250-252					Left rotation speed 8
253-255					Left rotation speed 9 max.

DMX CHANNEL	9	Parameter: COLOUR 2
-------------	----------	----------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-11					Colour1
12-23					Bicolour ½
24-35					Colour2
36-47					Bicolour 2/3
48-59					Colour3
60-71					Bicolour 3/4
72-83					Colour4
84-95					Bicolour 4/5
96-107					Colour5
108-119					Bicolour 5/6
120-131					Colour6
132-143					Bicolour 6/7
144-155					Colour7
156-167					Bicolour 7/8
168-179					Colour8

180-197					Bicolour 8/1
198-200					Right rotation speed 9 max.
201-203					Right rotation speed 8
204-206					Right rotation speed 7
207-209					Right rotation speed 6
210-212					Right rotation speed 5
213-215					Right rotation speed 4
216-218					Right rotation speed 3
219-221					Right rotation speed 2
222-224					Right rotation speed 1 min.
225-228					Stop
229-231					Left rotation speed 1 min.
232-234					Left rotation speed 2
235-237					Left rotation speed 3
238-240					Left rotation speed 4
241-243					Left rotation speed 5
244-246					Left rotation speed 6
247-249					Left rotation speed 7
250-252					Left rotation speed 8
253-255					Left rotation speed 9 max.

DMX CHANNEL	10	Parameter: ROTATING GOBO WHEEL
-------------	-----------	---------------------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-25					Open
26-51					Gobo 1
52-77					Gobo 2
78-103					Gobo 3
104-129					Gobo 4
130-155					Gobo 5
156-181					Gobo 6
182-207					Gobo 7
208-213					Speed rotation 1 min.
214-219					Speed rotation 2
220-225					Speed rotation 3
226-231					Speed rotation 4
232-237					Speed rotation 5
238-243					Speed rotation 6
244-249					Speed rotation 7
250-255					Speed rotation 8 max.

DMX CHANNEL	11	Parameter: ROTATING GOBO WHEEL ROTATION/INDEX
-------------	-----------	------------------------------------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-127					Proportional index 0° / 360°
128-180					Left rotation
181-202					Stop
203-255					Right rotation

DMX CHANNEL	12	Parameter: GOBO 2
-------------	-----------	--------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-22					Open
23-45					Gobo 1
46-68					Gobo 2
69-91					Gobo 3
92-114					Gobo 4
115-137					Gobo 5
138-160					Gobo 6
161-183					Gobo 7
184-207					Gobo 8
208-213					Speed rotation 1 min
214-219					Speed rotation 2
220-225					Speed rotation 3
226-231					Speed rotation 4
232-237					Speed rotation 5
238-243					Speed rotation 6
244-255					Speed rotation 7 max

DMX CHANNEL	13	Parameter: IRIS
-------------	-----------	------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
000-005					Open
006-159					Linear Iris from Open to Closed
160-171					Closed
172-199					Iris pulse at different speeds from Max to Min
200-227					Iris pulse with flash closing from Min to Max
228-255					Iris pulse with flash opening from Min to Max

DMX CHANNEL	14	Parameter: EFFECTS
-------------	-----------	---------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
000-085					No effect
086-171					3 facet prism
172-255					Frost

DMX CHANNEL	15	Parameter: EFFECTS ROTATION
-------------	-----------	------------------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-009					Stop
10-127					Left rotation from fast to slow
128-137					Stop
138-255					Right rotation from slow to fast

DMX CHANNEL	16	Parameter: FOCUS
-------------	-----------	-------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-255					Linear focus

DMX CHANNEL	17	Parameter: ZOOM
-------------	-----------	------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-255					Linear zoom

DMX CHANNEL	18	Parameter: RESET / LAMP
-------------	-----------	--------------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-9					No Effect
10-60					Lamp OFF (activ.after 3 seconds)
61-129					No Effect
130-179					Lamp ON (activ.after 3 seconds)
180-200					No Effect
201-239					Internal motor reset
240-255					Total Reset

25 CHANNELS MODE (DEFAULT)

1	PAN msb 540°
2	PAN lsb
3	TILT msb 270°
4	TILT lsb
5	SPEED MOVEMENT
6	DIMMER
7	SHUTTER
8	COLOUR 1
9	COLOUR 1 MODE
10	COLOUR 2
11	COLOUR 2 MODE
12	GOBO 1
13	GOBO 1 MODE
14	GOBO 1 ROTATION/INDEX COARSE
15	GOBO 1 INDEX FINE 16 bit
16	GOBO 1 SHAKE
17	GOBO 2
18	GOBO 2 SHAKE
19	IRIS
20	IRIS MACROS
21	EFFECTS
22	EFFECTS ROTATION
23	FOCUS
24	ZOOM
25	LAMP ON/OFF - RESET

DMX CHANNEL	1	Parameter: PAN msb
-------------	----------	---------------------------

DMX CHANNEL	2	Parameter: PAN lsb
-------------	----------	---------------------------

DMX CHANNEL	3	Parameter: TILT msb
-------------	----------	----------------------------

DMX CHANNEL	4	Parameter: TILT lsb
-------------	----------	----------------------------

DMX CHANNEL	5	Parameter: SPEED MOVEMENT
-------------	----------	----------------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-10					Standard
11-25					Fast movement
26-127					Vector mode from fast to slow
128-247					Variable time reaction to DMX signal (fast to slow)
248-255					Silent movement

DMX CHANNEL	6	Parameter: DIMMER
-------------	----------	--------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-7					Black-out
8-255					Proportional dimmer

DMX CHANNEL	7	Parameter: SHUTTER
-------------	----------	---------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-19					Black-out
20-39					Open
40-59					Black-out
60-79					Random Strobe
80-89					Strobe speed 1 min. (0,85 Hz)
90-99					Strobe speed 2 (1,4 Hz)
100-109					Strobe speed 3 (2 HZ)
110-119					Strobe speed 4 (3,75 Hz)
120-129					Strobe speed 5 (5 Hz)
130-139					Strobe speed 6 max. (6,75 Hz)
140-149					Pulse open speed 1 min.
150-159					Pulse open speed 2
160-169					Pulse open speed 3
170-179					Pulse open speed 4 max.
180-189					Pulse closed speed 1 min.
190-199					Pulse closed speed 2
200-209					Pulse closed speed 3
210-219					Pulse closed speed 4 max.
220-227					Colour and Gobo in black-out
228-233					Pan and Tilt in black-out
234-255					Open

DMX CHANNEL	8	Parameter: COLOUR 1
-------------	----------	----------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
IF CHANNEL 9 = FULL COLOUR (Dmx range value 0 - 63)					
0-31					Colour1
32-63					Colour2
64-95					Colour3
96-127					Colour4
128-159					Colour5
160-191					Colour6
192-223					Colour7
224-255					Colour8

DMX CHANNEL	8	Parameter: COLOUR 1
-------------	----------	----------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
IF CHANNEL 9 = HALF COLOUR (Dmx range value 64 - 127)					
0-27					Colour 1
28-55					Bicolour 1/ 2
56-83					Bicolour 2/ 3
84-111					Bicolour 3/ 4
112-139					Bicolour 4/ 5
140-167					Bicolour 5/ 6
168-195					Bicolour 6/ 7
196-223					Bicolour 7/ 8
224-255					Bicolour 8/ 1

IF CHANNEL 9 = PROPORTIONAL COLOUR (Dmx range value 128 - 191)					
0-10					No Colour
11-255					Proportional colour
IF CHANNEL 9 = RAINBOW (Dmx range value 192 - 255)					
0-9					No Colour
10-127					Right Rot.Speed from Max to Min
128-137					Stop
138-255					Left Rot.speed from Min to Max

DMX CHANNEL	9	Parameter: COLOUR 1 MODE
-------------	----------	---------------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-63					Full Colour
64-127					Half Colour
128-191					Proportional Colour
192-255					Rainbow

DMX CHANNEL	10	Parameter: COLOUR 2
-------------	-----------	----------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
IF CHANNEL 11 = FULL COLOUR (Dmx range value 0 - 63)					
0-31					Colour1
32-63					Colour2
64-95					Colour3
96-127					Colour4
128-159					Colour5
160-191					Colour6
192-223					Colour7
224-255					Colour8

DMX CHANNEL	10	Parameter: COLOUR 2
-------------	-----------	----------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
IF CHANNEL 11 = HALF COLOUR (Dmx range value 64 - 127)					
0-27					Colour 1
28-55					Bicolour 1 /2
56-83					Bicolour 2/3
84-111					Bicolour 3/4
112-139					Bicolour 4/5
140-167					Bicolour 5/6
168-195					Bicolour 6/7
196-223					Bicolour 7/8
224-255					Bicolour 8/9
234-255					Bicolour 9/1
IF CHANNEL 11 = PROPORTIONAL COLOUR (Dmx range value 128 - 191)					
0-10					No Colour
11-255					Proportional colour
IF CHANNEL 11 = RAINBOW (Dmx range value 192 - 255)					
0-9					No Colour
10-127					Right Rot.Speed from Max to Min
128-137					Stop
138-255					Left Rot.speed from Min to Max

DMX CHANNEL	11	Parameter: COLOUR 2 MODE
-------------	-----------	---------------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-63					Full Colour
64-127					Half Colour
128-191					Proportional Colour
192-255					Rainbow

DMX CHANNEL	12	Parameter: GOBO 1
-------------	-----------	--------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-25					Open
26-51					Gobo 1
52-77					Gobo 2
78-103					Gobo 3
104-129					Gobo 4
130-155					Gobo 5
156-181					Gobo 6
182-207					Gobo 7
208-213					Rotation speed 1 min.

DMX CHANNEL	12	Parameter: GOBO 1
-------------	-----------	--------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
214-219					Rotation speed 2
220-225					Rotation speed 3
226-231					Rotation speed 4
232-237					Rotation speed 5
238-243					Rotation speed 6
244-249					Rotation speed 7
250-255					Rotation speed 8 Max

DMX CHANNEL	13	Parameter: GOBO 1 MODE
-------------	-----------	-------------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-127					Gobo Rotation Mode
128-255					Gobo Index Mode

DMX CHANNEL	14	Parameter: GOBO 1 ROTATION/GOBO 1 INDEX COARSE
-------------	-----------	-------------------------------------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
IF CHANNEL 13 = Gobo Rotation Mode (Dmx range value 0 - 127)					
0-9					Stop
10-127					SX Rot. Prop. Speed Max to Min
128-137					Stop
138-255					DX Rot. Prop. Speed Min to Max
IF CHANNEL 13 = Gobo Index Mode (Dmx range value 128 - 255)					
0-255					Gobo index Coarse

DMX CHANNEL	15	Parameter: GOBO 1 INDEX FINE
-------------	-----------	-------------------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-255					Gobo Index Fine

DMX CHANNEL	16	Parameter: GOBO 1 SHAKE
-------------	-----------	--------------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-9					Stop
10-22					Gobo Shake R-L Speed 1 Min.
23-35					Gobo Shake R-L Speed 2
36-48					Gobo Shake R-L Speed 3

DMX CHANNEL	16	Parameter: GOBO 1 SHAKE
-------------	----	--------------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
49-61					Gobo Shake R-L Speed 4
62-74					Gobo Shake R-L Speed 5
75-87					Gobo Shake R-L Speed 6
88-100					Gobo Shake R-L Speed 7
101-113					Gobo Shake R-L Speed 8
114-126					Gobo Shake R-L Speed 9 Max
127-138					Stop
139-151					Gobo Shake L-R Speed 1 Min
152-164					Gobo Shake L-R Speed 2
165-177					Gobo Shake L-R Speed 3
178-190					Gobo Shake L-R Speed 4
191-203					Gobo Shake L-R Speed 5
204-216					Gobo Shake L-R Speed 6
217-229					Gobo Shake L-R Speed 7
230-242					Gobo Shake L-R Speed 8
243-255					Gobo Shake L-R Speed 9 Max

DMX CHANNEL	17	Parameter: GOBO 2
-------------	----	--------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-22					Open
23-45					Gobo 1
46-68					Gobo 2
69-91					Gobo 3
92-114					Gobo 4
115-137					Gobo 5
138-160					Gobo 6
161-183					Gobo 7
184-207					Gobo 8
208-213					Speed rotation 1 min
214-219					Speed rotation 2
220-225					Speed rotation 3
226-231					Speed rotation 4
232-237					Speed rotation 5
238-243					Speed rotation 6
244-255					Speed rotation 7 max

DMX CHANNEL	18	Parameter: GOBO 2 SHAKE
-------------	-----------	--------------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-9					Stop
10-22					Gobo Shake R-L Speed 1 Min.
23-35					Gobo Shake R-L Speed 2
36-48					Gobo Shake R-L Speed 3
49-61					Gobo Shake R-L Speed 4
62-74					Gobo Shake R-L Speed 5
75-87					Gobo Shake R-L Speed 6
88-100					Gobo Shake R-L Speed 7
101-113					Gobo Shake R-L Speed 8
114-126					Gobo Shake R-L Speed 9 Max
127-138					Stop
139-151					Gobo Shake L-R Speed 1 Min
152-164					Gobo Shake L-R Speed 2
165-177					Gobo Shake L-R Speed 3
178-190					Gobo Shake L-R Speed 4
191-203					Gobo Shake L-R Speed 5
204-216					Gobo Shake L-R Speed 6
217-229					Gobo Shake L-R Speed 7
230-242					Gobo Shake L-R Speed 8
243-255					Gobo Shake L-R Speed 9 Max

DMX CHANNEL	19	Parameter: IRIS
-------------	-----------	------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-5					Open
6-255					Linear Iris from Open to Closed

DMX CHANNEL	20	Parameter: IRIS MACROS
-------------	-----------	-------------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-9					No effect
10-91					Iris pulse at different speeds from Min to Max
92-173					Iris pulse with flash closing from Min to Max
174-255					Iris pulse with flash opening from Min to Max

DMX CHANNEL	21	Parameter: EFFECTS
-------------	-----------	---------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-085					No effect
86-171					3 facet prism
172-255					Frost

DMX CHANNEL	22	Parameter: EFFECTS ROTATION
-------------	-----------	------------------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-9					Stop
10-127					Left Rotation from fast to slow
128-143					Stop
144-255					Right Rotation from slow to fast

DMX CHANNEL	23	Parameter: FOCUS
-------------	-----------	-------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-255					Linear Focus

DMX CHANNEL	24	Parameter: ZOOM
-------------	-----------	------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-255					Linear zoom

DMX CHANNEL	25	Parameter: RESET
-------------	-----------	-------------------------

DMX range Value	Mid point DMX value	Move range (degrees)	Mode	Option	Function
0-9					No Effect
10-60					Lamp OFF (activ.after 3 seconds)
61-129					No Effect
130-179					Lamp ON (activ.after 3 seconds)
180-200					No Effect
201-239					Internal motor reset
240-255					Total Reset

26 CHANNELS MODE (SEE THE 25 CHANNELS MODE FOR DETAILS)

1	PAN msb 540°
2	PAN lsb
3	TILT msb 270°
4	TILT lsb
5	SPEED MOVEMENT
6	DIMMER
7	SHUTTER
8	COLOUR 1
9	COLOUR 1 MODE
10	COLOUR 2
11	COLOUR 2 MODE
12	GOBO 1
13	GOBO 1 MODE
14	GOBO 1 ROTATION/INDEX COARSE
15	GOBO 1 INDEX FINE 16 bit
16	GOBO 1 SHAKE
17	GOBO 2
18	GOBO 2 SHAKE
19	IRIS
20	IRIS MACROS
21	EFFECTS
22	EFFECTS ROTATION
23	<u>NOT USED</u>
24	FOCUS
25	ZOOM
26	LAMP ON/OFF - RESET

23- 8 MOTORS CONTROL CARD

8 MOTORS CONTROL CARD

J7 Magnetic Sensors
Connector

Line 1 Brown
Line 2 Orange

GND
ORANGE
BROWN
VCC

J26 to 6 Motors
Control card

J9 from J3 Lamp ON-OFF
control card

J1 Internal DATA
Communication
Connector
From J8 Pan & Tilt
card

30 VDC

Fans

Fans


Rotating gobo wheel
(BLACK)

Fixed gobo wheel
(DARK GREEN)

Strobe
(YELLOW)

Colour 1
(GREY)

Colour 2
(LIGHT BLUE)

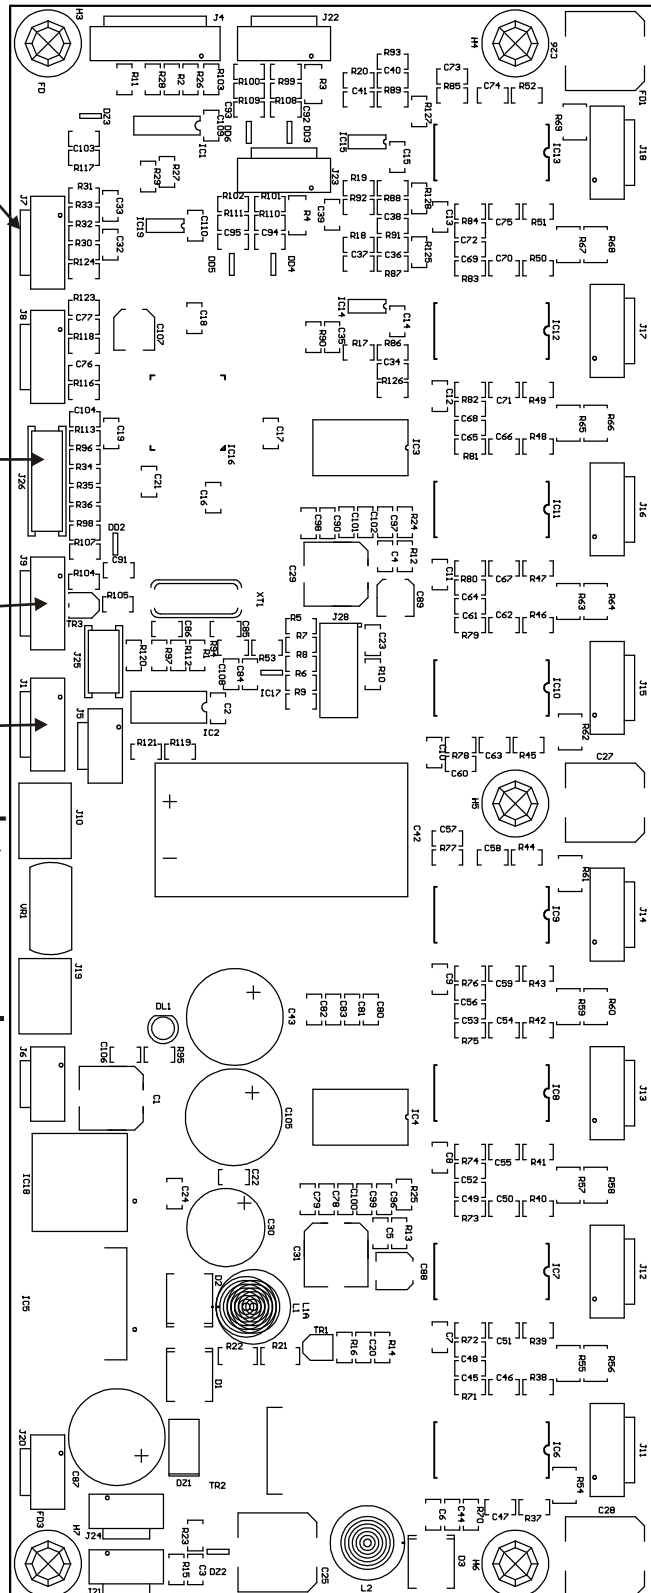


24- 6 MOTORS SLAVE CONTROL CARD

J1 from 8
Motors
Control card

GND
RES LINE 3
RES LINE 3
+5V

30 VDC

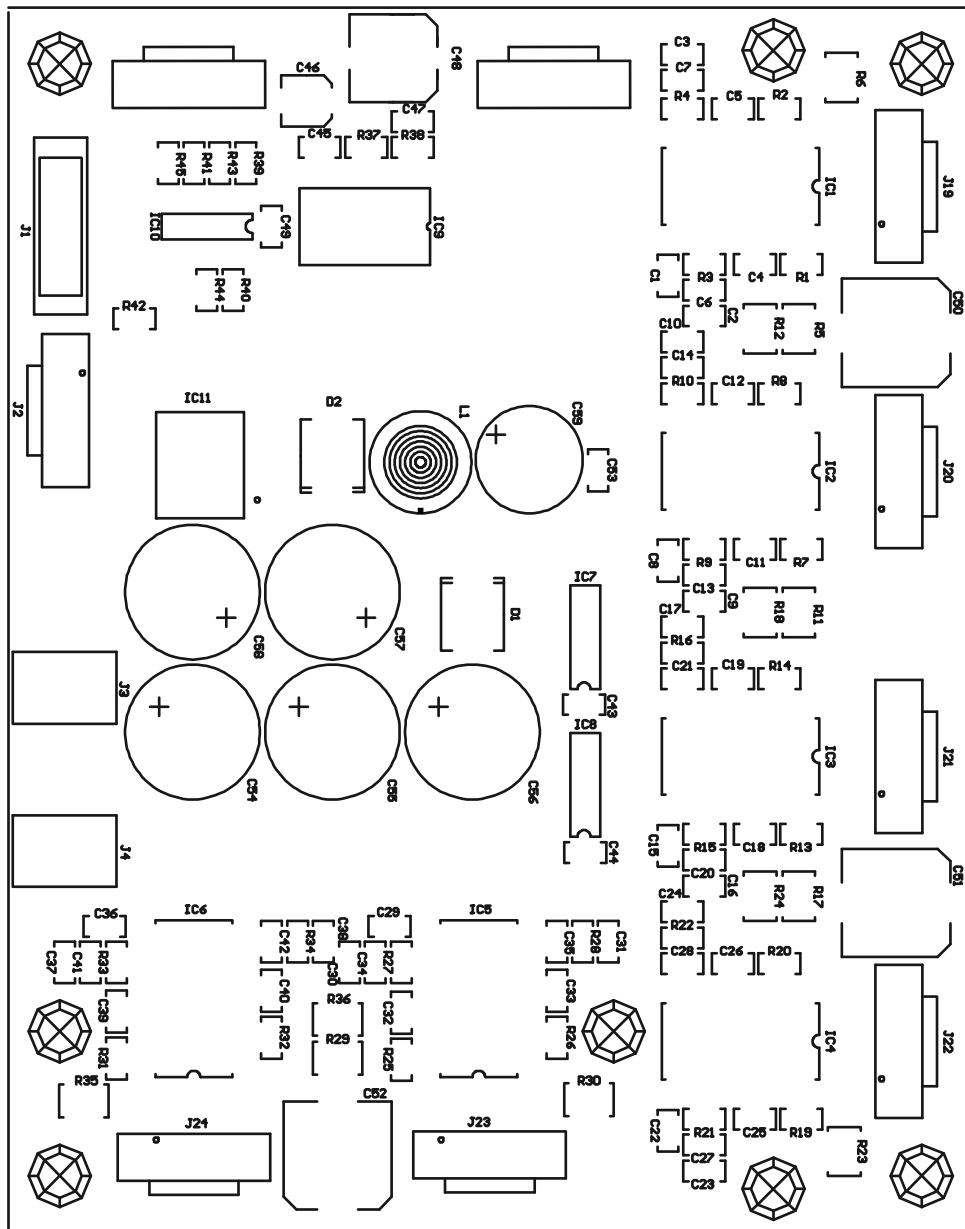

Iris
(RED)

Effect rotation
(DARK ORANGE)


Effects
(LIGHT ORANGE)

Gobo rotation
(BROWN)

Zoom
(YELLOW)


Focus
(VIOLET)

25-PAN & TILT CARD

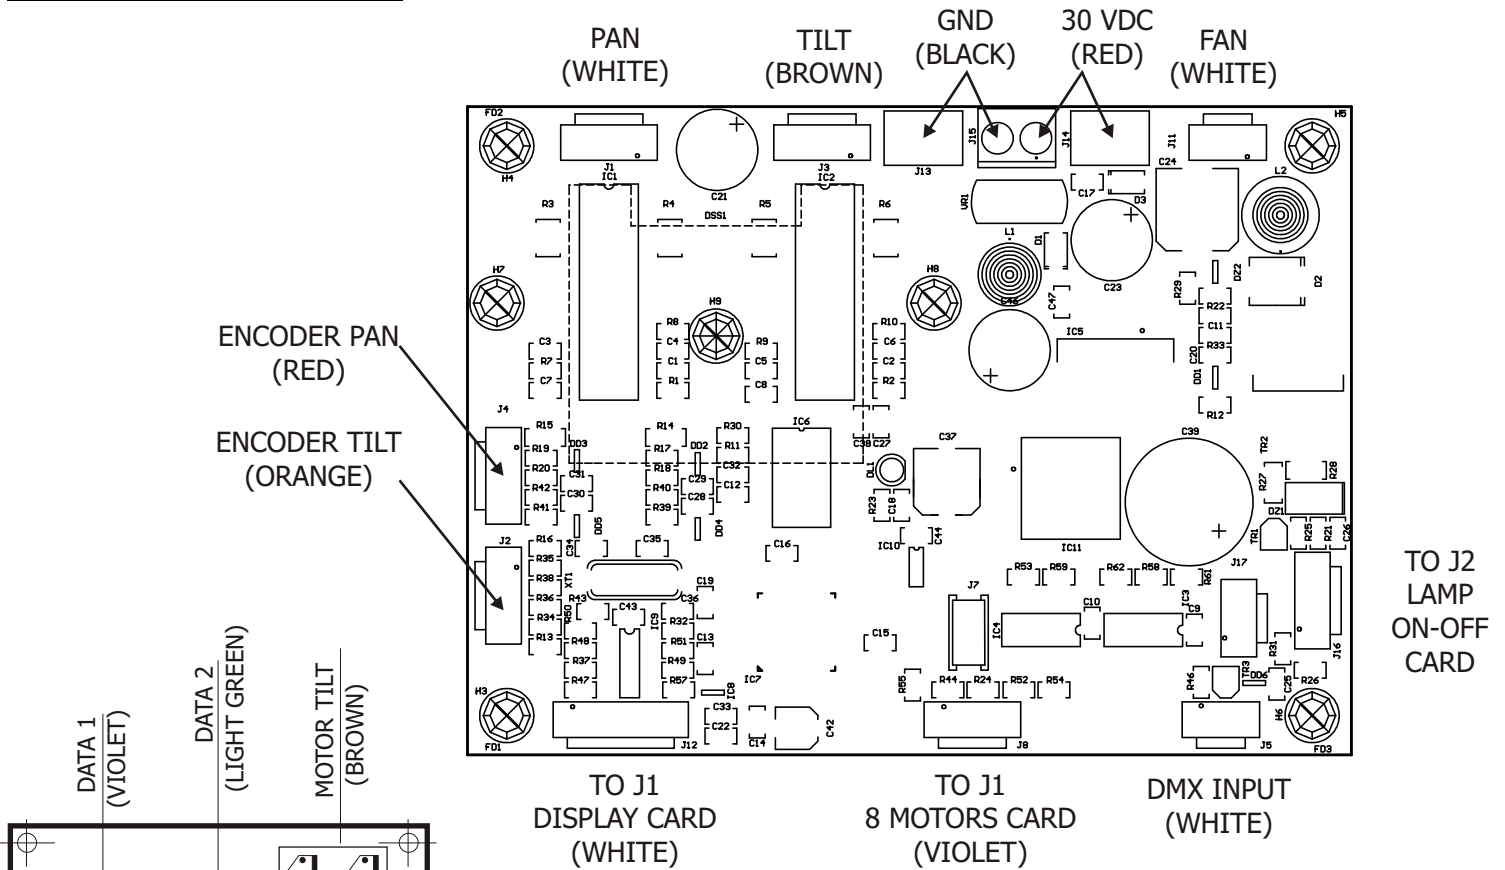


26-CABLES RESEND CARD


27-DISPLAY CARD

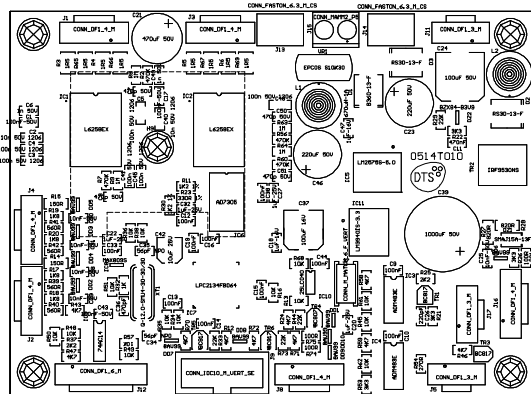

28-LAMP ON-OFF CONTROL CARD

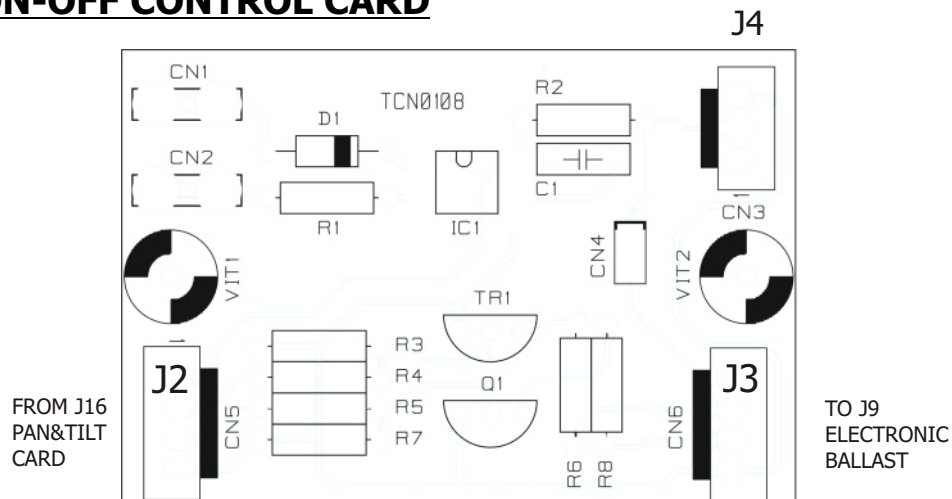

29- ROTATING GOBO WHEEL

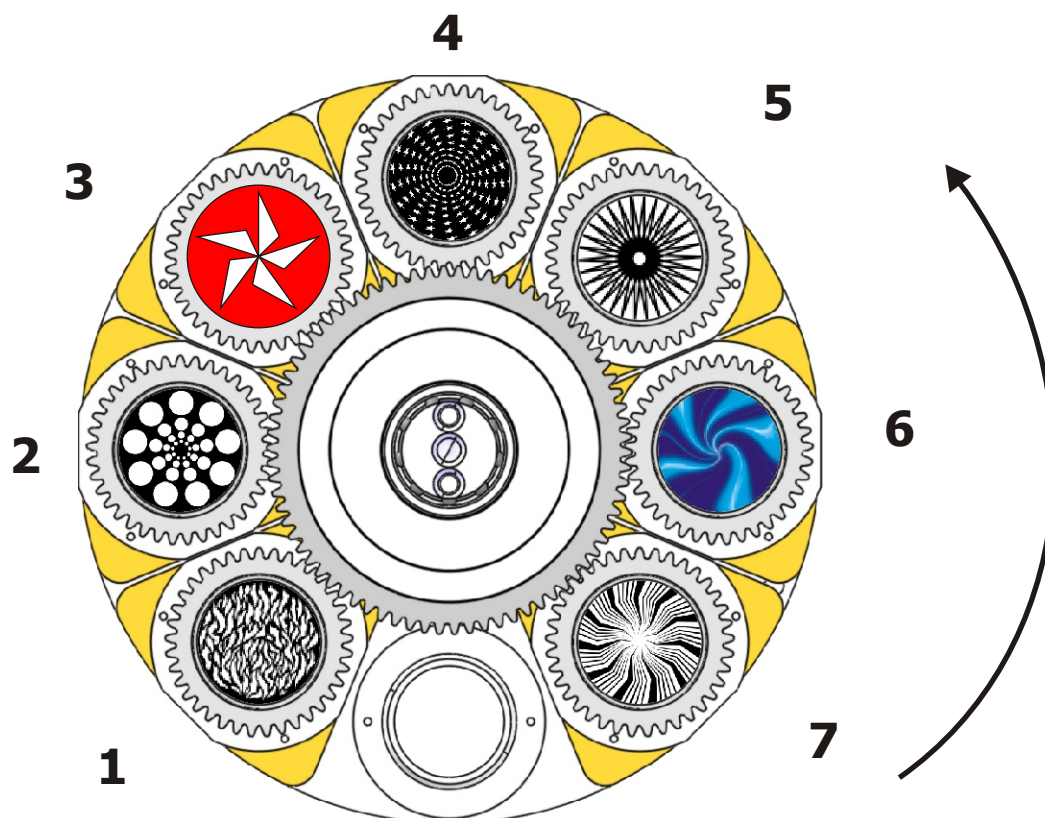


GOBO 1 DICRO




0516G032.01

GOBO 2 DICRO

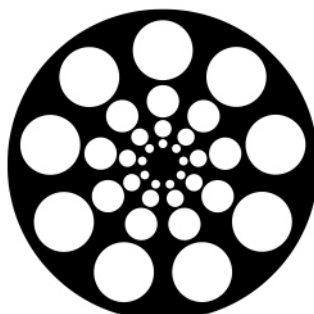


0516G032.08

GOBO 3 DICRO

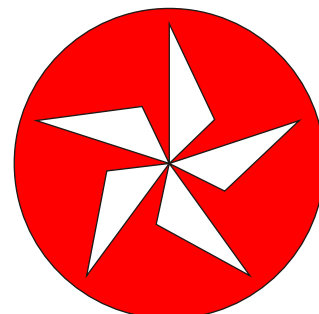


0516G032.12

GOBO 4 DICRO

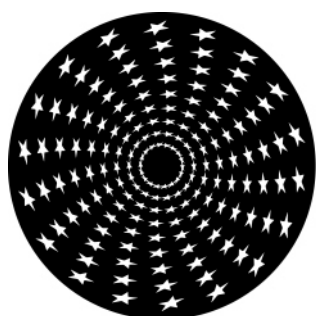


0516G032.10

GOBO 5 DICRO

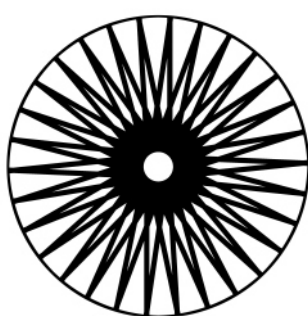


0516G032.11

GOBO 6 DICRO

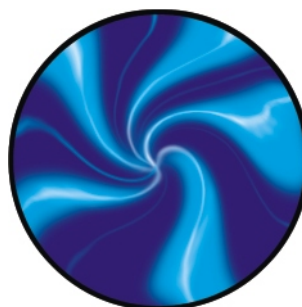


0516G032.03

GOBO 7 DICRO

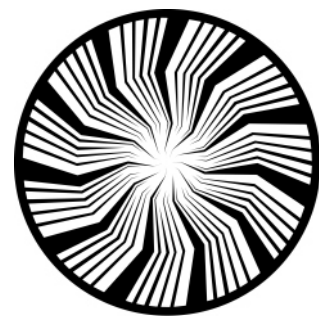


0516G032.05

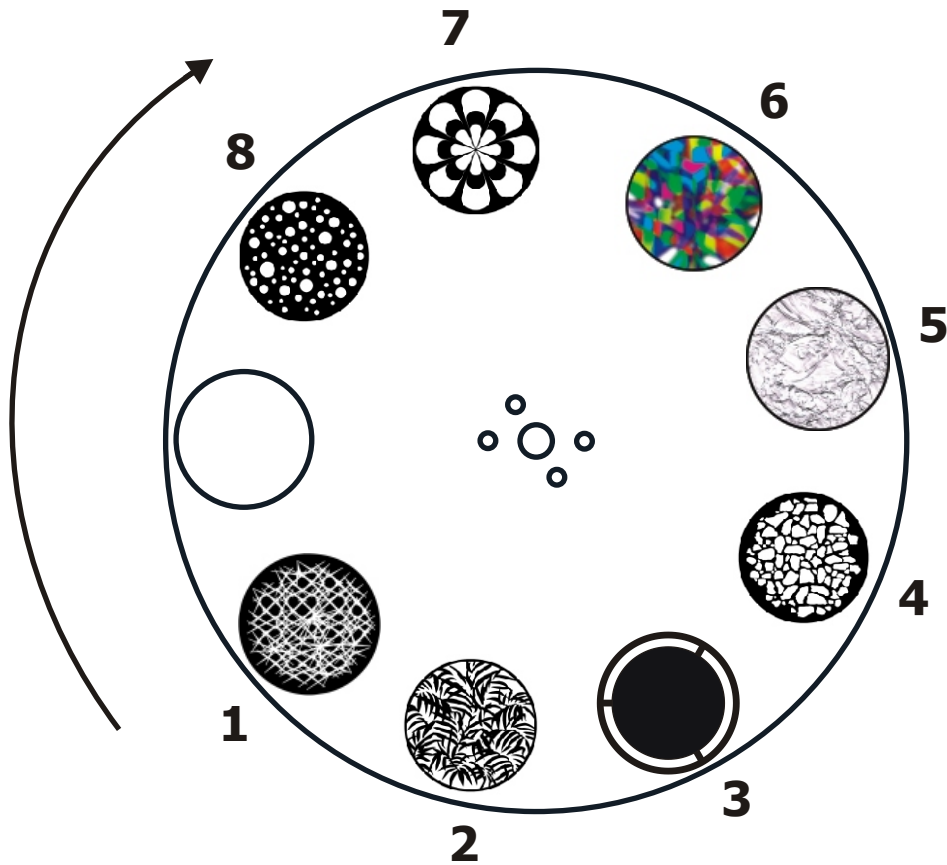30- FIXED GOBO WHEEL**GOBO 1 DICRO**

0516G032.06

GOBO 2 DICRO

0516G032.04

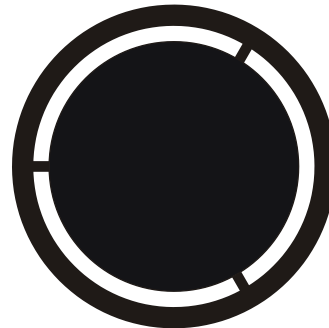GOBO 3 METAL


0516G032.15.M.58

GOBO 4 DICRO


0516G032.07

GOBO 5 GLASS


0516G032.14

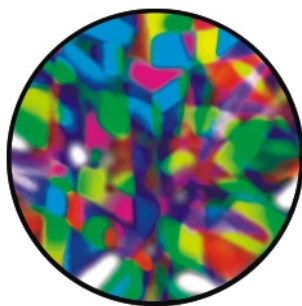GOBO 6 DICRO



0516G032.09

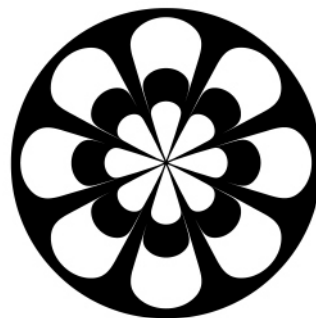GOBO 7 DICRO


0516G032.13

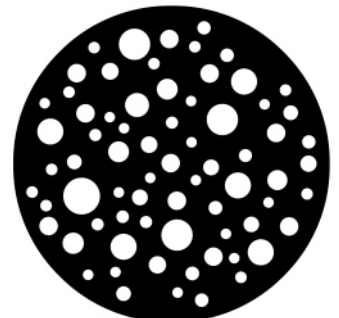GOBO 8 DICRO


0516G032.02

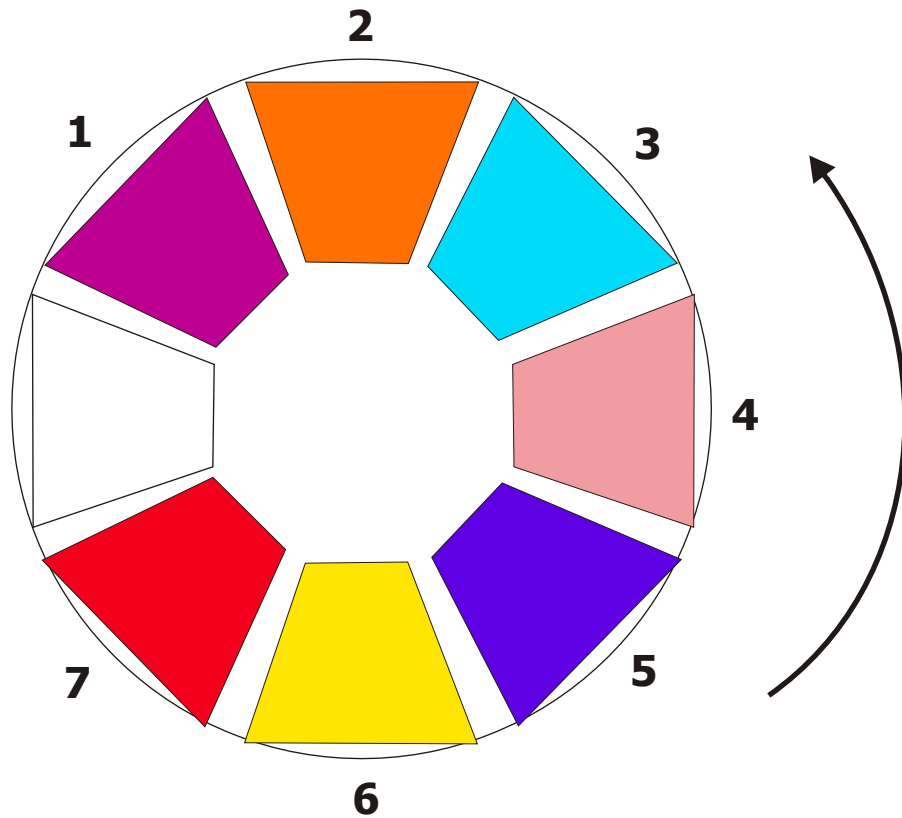31- COLOUR WHEEL 1**COL1**


0507C043.D10
LAVANDER SL0064

COL2


0507C051.D10
ORANGE LW590

COL3


0507C045.D10
CYAN SW 530

COL4


0507C058.D10
PINK SL4758

COL5



0507C041.D10
DARK BLUE SW490

COL6


0507C049.D10
YELLOW LW 515

COL7


0507C047.D10
RED LW 640

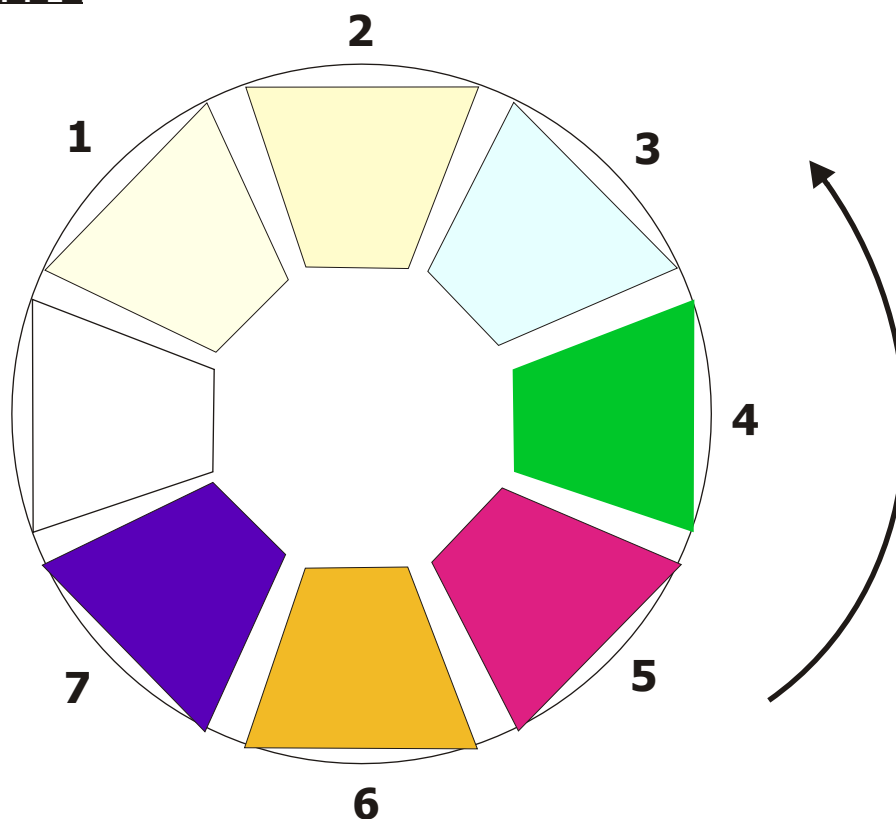32- COLOUR WHEEL 2**COL1**


0507K005.D10
HALF CONV.FILTER
HOT TC3256

COL2

0507K004.D10
CONV.FILTER HOT
TC3256

COL3


0507K003.D10
CONV. FILTER COLD
DL542

COL4


0507C042.D10
GREEN WB5055

COL5

0507C038.D10
MAGENTA SL 4763

COL6

0507C053.D10
AMBER LW550

COL7

0507C046.D10
WOOD SW460

NOTES

NOTES

NOTES

The information contained in this publication has been carefully prepared and checked. However, no responsibility will be taken for any errors. All rights are reserved and this document cannot be copied, photocopied or reproduced, in part or completely, without prior written consent from D.T.S.

D.T.S. reserves the right to make any aesthetic, functional or design modifications to any of its products without prior notice. D.T.S. assumes no responsibility for the use or application of the products or circuits described herein.

MADE IN ITALY



The Lighting Company

ISO 9001:2000

D.T.S. quality system
is certified to the
ISO 9001:2000 standard



D.T.S. products are designed
and manufactured at the D.T.S.
plants in Italy



05171108